

hama[®]

PO Box 80 · 86651 Monheim/Germany

Phone: +49 9091 502-0

Fax: +49 9091 502-458

hama@hama.de

<http://www.hama.com>


hama®

P C - G A M E

PC-Gamepad »Cromo«



00062875/00062876

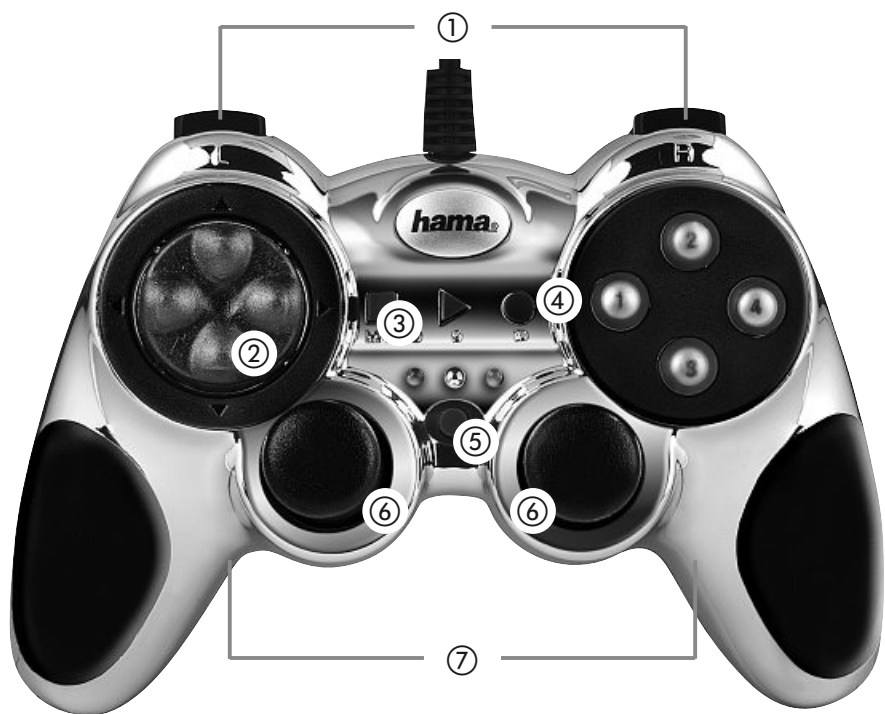

(D)		
1. 4 Schultertasten	2. 8 Wege-Steuerpad	3. Macro-Taste
4. 6 Aktionstasten	5. Umschalttaste: Analog/Digital	6. 2 Analog-Sticks mit Tastenfunktion
7. eingebaute Motoren für Dual Vibration		
(GB)		
1. 4 shoulder buttons	2. 8-way controller	3. Macro button
4. 6 action buttons	5. Toggle button: (analogue/digital)	6. 2 analogue sticks with a button function
7. Integrated motors for dual vibration effect		
(F)		
1. 4 gâchettes	2. Croix octodirectionnelle	3. Touche Macro
4. 6 boutons d'action	5. Touche de commutation: analogique/numérique	6. 2 sticks analogiques avec fonction de touche
7. Moteurs intégrés pour une vibration binaire		

I. Introduction

Thank you for choosing the Hama Cromo Gamepad and congratulations on your decision.

We are certain that our product will provide you with a great deal of gaming pleasure for years to come. This quick guide contains valuable information on operating and configuring the gamepad. Please keep these instructions in a safe location for future reference.

II. Product Features

- 12 programmable buttons
- 2 360° analogue sticks including button function
- Rubberised air pad to relieve strain on hand muscles
- Additional air cushions with light effects on the primary fire buttons and directional pad
- Switchable analogue/digital function
- 2 integrated motors for vibration
- Macro function for saving sequences (not supported by all games)

III. System Requirements

- Windows 98SE/ME/2000/XP/Vista
- USB port

Note:

Please note that USB operation is not supported by Windows 95/NT.

IV. Installation

Software installation

1. Insert the enclosed driver CD into your CD-ROM drive.
2. The installation program starts automatically.
3. If it does not start, proceed as follows:
START > Run > Browse
Select your CD-ROM drive.
4. Double-click the autorun.exe file.
5. Follow the steps in the installation program.
6. Restart your PC.

Hardware installation

1. After installing the software, plug the USB cable of your gamepad into a USB port on your computer. Your operating system may prompt you to insert your Windows CD to install the new hardware components.
2. To configure the device, click:
START > Settings > Control Panel > Game Controllers
(Windows XP in standard view: Start > Control Panel > Printers and Other Hardware > Game Controllers)
Note that the Game Controllers control panel is called Gaming Options in Windows ME.
3. Select the Hama Cromo pad.
4. Now click Properties to test and calibrate all functions in the menu, including vibration.

V. Functions

Macro function

The Cromo Pad allows you to save certain movement and button sequences.

To do so, proceed as follows:

1. Press the Macro button.
2. Now press one of the four buttons you wish to set (button 5, button 6, button 11 or button 12 – see button description)
3. You can now set the button sequence via the other buttons and the directions via the eight-way directional pad
4. Press the Macro button again.
5. Now press the button you set to perform the sequence
To clear the combination, press Macro, then the button which was set and then press Macro again.

Note:

Not all games support the macro function, which means that the buttons do not play back the sequence saved when pressed.

Vibration function

The Cromo Pad has two internal motors, which only function in games that support Force Feedback and when all supplied drivers have been installed.

Refer to the manual of your game to find out if it supports the vibration function.

If problems persist, check whether vibration support was activated in the game options.

Mode functions

The Hama Cromo Pad lets you choose between two modes:

1. Digital

This mode lets you control the direction of action using the 8-way directional pad – the sticks usually remain deactivated.

2. Analogue

In analogue mode, the sticks assist perfectly for 3D games. In addition to the left stick, which controls movement, you can perform other functions using the right stick, such as rotation. The directional pad can help you by providing a quick all-around view.

Notes

1. Ensure that your game software supports game controllers.
2. In order to use the vibration function, your game software must support Force Vibration/Force Feedback.
3. If some buttons do not function in the game, check the button settings in the option menu. They can generally be configured there as well. Also refer to the manual of the game in question.

Safety instructions

1. Do not attempt to service or repair the device yourself.
Leave any service work to qualified experts.
2. Do not modify the device in any way. Doing so voids the warranty.

VI. Support and contact information

If products are defective:

Please contact your dealer or Hama Product Consulting if you have any product claims.

Internet / World Wide Web:

Product support, new drivers or product information can be found at www.hama.com

Support Hotline – Hama Product Consulting:

Tel. +49 (0) 9091 / 502-115

Fax +49 (0) 9091 / 502-272

E-mail: produktberatung@hama.de